


AQ-PRO

Startup

1. Place the unit on a clean, level surface.
2. Ensure there is adequate space on all sides of the unit to allow for usage and maintenance.
3. Lock the front casters.
4. Attach the electrical cable to a dedicated circuit capable of supplying 120 volts, 20 amps.
5. Fill the tank with **20 gal.** of clean, diluted, **non-foaming** aqueous cleaner.
6. Set the MAIN POWER switch on the side of the control box to ON.
7. Ensure the EMERGENCY STOP switch is set to OFF. If the EMERGENCY STOP switch is engaged, twist clockwise to release.
8. Press the white AUXILIARY ON button. The white LED will illuminate.
9. Ensure there is adequate cleaning fluid in the unit. The LOW LEVEL INDICATOR lamp must be off.
10. Select the desired wash water temperature using the THERMOSTAT CONTROL KNOB. The green HEAT ON heater lamp will illuminate. The green HEAT ON heater lamp will remain on until the desired temperature is reached.

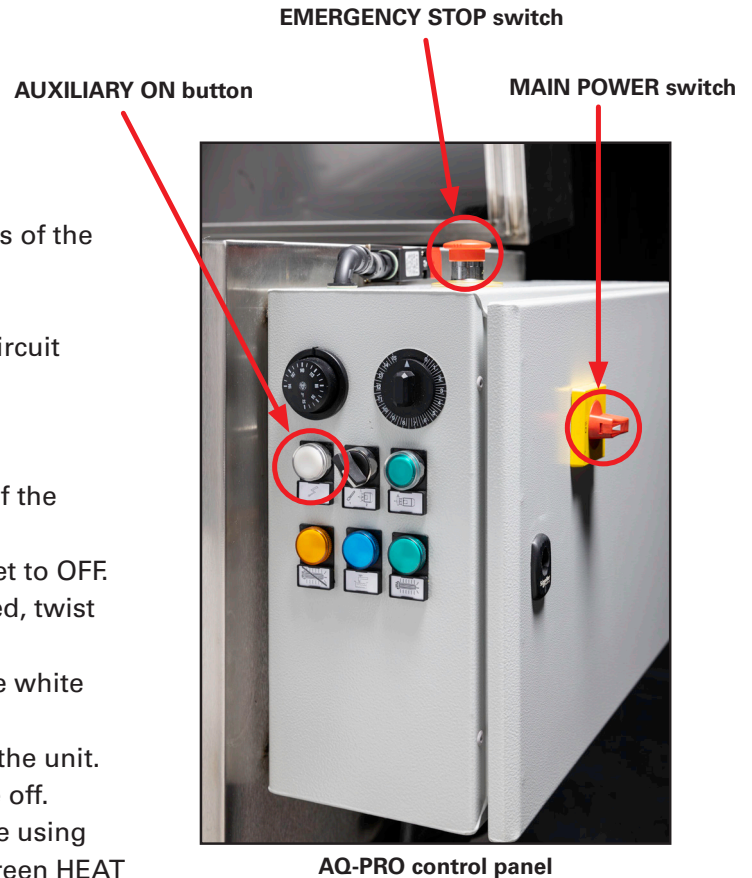

AQ-PRO control panel

Test the manual pump

1. Open the lid.
2. Remove the flow-through brush from the clips and point towards the tank.
3. Move the PUMP SWITCH to the brush pump setting, observe fluid flow.
4. Move the PUMP SWITCH back to the spray pump setting.
5. Mount the flow-through brush to the clips.
6. Close and latch the lid.

Test the spray pump

1. Move the timer past the 5-minute mark, then to desired spray time.
2. Press the green SPRAY/TURNTABLE button, observe spray.
3. Move the timer to zero to stop spray.

TRUST US. WE CAN TAKE IT.

SAFETY-KLEEN.COM | (877) 669-5705

©2024 Safety-Kleen Systems, Inc., a Clean Harbors Company. All Rights Reserved. All information contained herein was current at the time of the publication. Safety-Kleen Systems, Inc. reserves the right to add, delete, modify or revise the products and services available without prior notice or obligation. Rev. 121224

